Wireless Internet / Interactive Messaging

Getting Started Guide for Motorola V60t

TDMA

NOVEMBER 2001

NOTICE

This user guide is published and copyrighted by Cingular Wireless, LLC. Every effort has been made to ensure technical accuracy; information contained in this document is subject to change without notice and does not represent a commitment on the part of Cingular Wireless, LLC.

TRADEMARKS

Cingular is a service mark of Cingular Wireless, LLC. All other trademarks and service marks contained herein are the property of their respective owners.

© 2001 Cingular Wireless, LLC
All Rights Reserved. (Rev. 11/2001)
DOC 1005 GSG Motorola V60t 1000

5565 Glenridge Connector
Atlanta, GA 30342
Web Address: http://www.cingular.com

Table Of Contents

GETTING STARTED 3

ACTIVATING SERVICE 4
Activate *4*
SELF-REGISTRATION 5
New User Registration *5*
PERSONALIZE YOUR MY WIRELESS WINDOW WEBSITE 10
Personalize your Website *10*

HELPFUL TIPS11

ACCESSING THE WIRELESS INTERNET 12
Motorola V60t *12*
SELECTING A LANGUAGE 13
Motorola V60t *13*
FINDING YOUR WAY HOME 14
Finding Your Way Home *14*
Navigating to the Home Menu *14*
SCROLLING, CHOOSING ITEMS, AND USING THE SOFT KEYS ON YOUR PHONE 15
Scrolling *15*
Choosing Items *16*
Using Soft Keys *16*
Using the Keys on Your Internet-ready wireless Phone *16*
ENTERING TEXT WITH YOUR KEY PAD 17
Entering Text *17*
EXITING A WIRELESS INTERNET DATA CALL 18
Exit a Data Call *18*
PERSONALIZING INFORMATION IN MY INFO 19
Sign In *19*
USING INTERACTIVE MESSAGING 20
Sending a Message *20*
Receiving a Message *21*

Getting Started

This section contains helpful information on:

- Activating Service
- Self – Register at www.MyWirelessWindow.com
- Setup and Personalize the My Wireless Window Website

Activating Service

Activate If you have not already subscribed to the Wireless Internet features you can do so by calling Customer Care at 1-866-463-6272 or 611 from your wireless phone.

Self-Registration

New User Registration

To personalize your My Wireless Window Website for use from your phone browser you will need to Register the first time you enter the Website. If you are an existing Interactive Messaging customer and currently use this Website for Interactive Messaging, contact Cingular customer service at 1-866-463-6272 or 611 from your wireless phone to have your Website account upgraded to support the personalized browser content. The following instructions give detailed steps to follow for New User Registration.

Note: In order to validate your wireless phone number for My Wireless Window, an **Authorization Code** will be sent to your wireless phone. Please ensure your wireless phone is powered on and you are within the Cingular coverage area so you can receive this message during the registration process. **Please make sure your wireless phone is on now.**

Step	Action
1	From your PC, open your browser and enter the following URL address: www.mywirelesswindow.com.
2	Under Wireless Internet Click the **"Register"** link. My Wireless Window - Cingular Wireless - Microsoft Internet Explorer provided File Edit View Favorites Tools Help Back Forward Stop Refresh Home Search Favorites History Mail Address http://www.mywirelesswindow.com wireless internet interactive messaging cingular MY WIRELESS WINDOW features pricing availability phones & devices content providers user information register
3	Enter a proposed Username in box and click **Continue**.

	 Note: Username must start w/3 alpha-characters and be no more than 30 characters; only letters, numbers, and _ (underscore) can be used.)
4	If Username is available, then click **Accept** and go to STEP 6.
5	If Username is already in use, then enter another Username, click **Try Again**, and repeat STEP 4 until the preferred Username is available.
6	Create your user profile. Enter your personal information in the open fields. Required information must be entered to continue with the registration process.

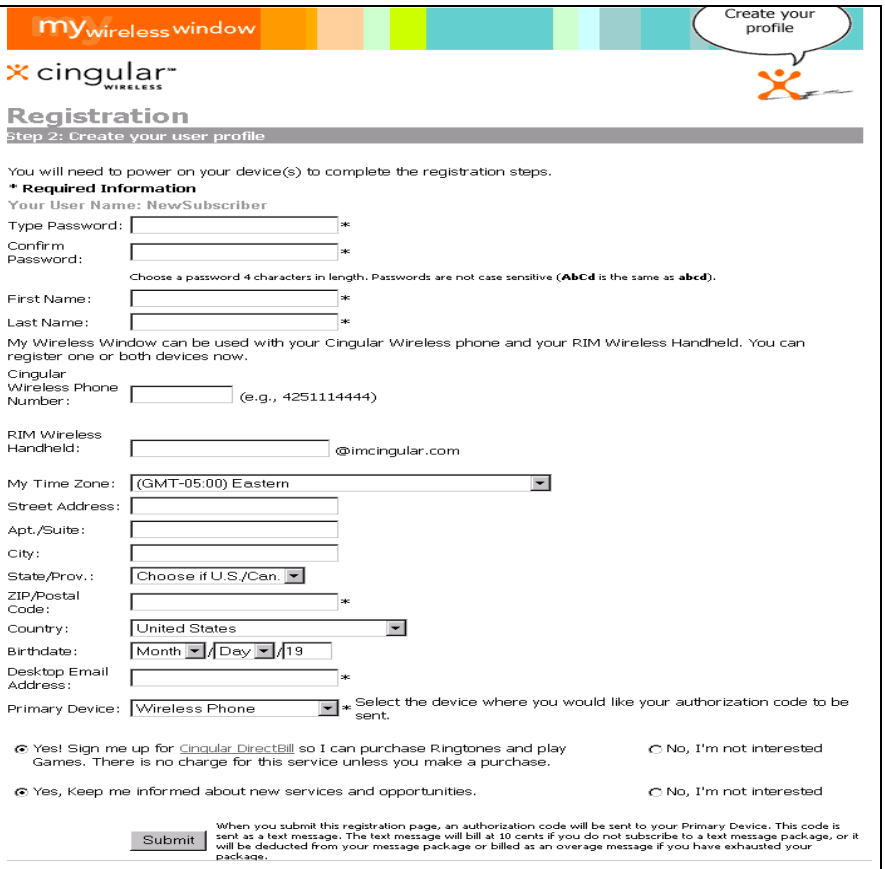
my wireless window
Create your profile
cingular WIRELESS
Registration
Step 2: Create your user profile
You will need to power on your device(s) to complete the registration steps.
* Required Information
Your User Name: NewSubscriber
Type Password:
Confirm Password:
Choose a password 4 characters in length. Passwords are not case sensitive (AbCd is the same as abcd).
First Name:
Last Name:
My Wireless Window can be used with your Cingular Wireless phone and your RIM Wireless Handheld. You can register one or both devices now.
Cingular Wireless Phone Number:
(e.g., 4251114444)
RIM Wireless Handheld:
@imcingular.com
My Time Zone:
(GMT-05:00) Eastern
Street Address:
Apt./Suite:
City:
State/Prov.:
Choose if U.S./Can.
ZIP/Postal Code:
Country:
United States
Birthdate:
Month / Day / 19
Desktop Email Address:
Primary Device:
Wireless Phone
Select the device where you would like your authorization code to be sent.
Yes! Sign me up for Cingular DirectBill so I can purchase Ringtones and play Games. There is no charge for this service unless you make a purchase.
No, I'm not interested
Yes, Keep me informed about new services and opportunities.
No, I'm not interested
Submit
When you submit this registration page, an authorization code will be sent to your Primary Device. This code is sent as a text message. The text message will bill at 10 cents if you do not subscribe to a text message package, or it will be deducted from your message package or billed as an overage message if you have exhausted your package.

- Type Password* **Enter the 4-digits/characters Password that you choose at time of activation** or choose a password 4-digits/characters in length. Passwords are not case sensitive – AbCd is the same as abcd.
- Confirm Password*
- First Name*
- Last Name*
- Cingular Wireless Phone Number*
- Rim Wireless Handheld email address
- Time Zone*
- Street Address
- Apt./Suite
- City
- State/Prov.
- ZIP/Postal Code*
- Country
- Birthdate
- Desktop Email Address*

*** Required Fields to Enter**

Click **Submit** when finished.

Note: The Authorization Code is sent to your handset as a

	"Text Message" and will be billed at $0.10 if you do not subscribe to a text message package, or it will be deducted from your messaging package or be billed at an overage rate if you have exhausted your package.
7	In order to validate your wireless phone number for My Wireless Window, an **Authorization Code** will be sent to your wireless phone. Please ensure your wireless phone is powered on and you are within the Cingular coverage area so you can receive this message during the registration process. **Please make sure your wireless phone is on now.** Registration Step 3: Validate your wireless device Authorization Code In order to validate your wireless phone for My Wireless Window, an Authorization Code will be sent to your wireless phone number. Please ensure that your wireless phone is powered on and you are in the Cingular coverage area so you can receive this message. You will be required to enter your Authorization Code in order to continue with your registration. You can view your Authorization Code by accessing "Text Messages" on your wireless phone. Please enter your Authorization Code on the next page. Continue You will be required to enter your Authorization Code on the next screen to continue with your registration. When the message is received on your wireless phone you can view your Authorization Code by accessing "Text Messages" on your wireless phone. Click **"Continue"** to proceed with registration.
8	Please enter the Authorization Code you received on your wireless phone to validate your wireless phone number for My Wireless Window. Press **Submit**

9	Haven't received your Authorization Code? If you have waited 5 minutes and still not received your Authorization Code, then try the following options. 1. Click the **"Resend"** button – first make sure your phone is powered on. 2. If you still have not received your Authorization Code, press the "**click here"** to link to confirm that you entered your wireless phone number correctly. Click the **"Resend"** button when you return to the "Validate your wireless device continued" page. 3. If you correctly entered your wireless phone number and still have not received the Authorization Code, then please contact Cingular Wireless customer service at 1-866-463-6272 or 611 from your wireless phone.

Personalize Your My Wireless Window Website

Personalize your Website

After finishing the Self-Registration you are now logged in to the mywirelesswindow.com Website.

- You can personalize any of the sections by clicking the blue “edit” button located in the upper right corner of the section.
- You can set up Info Alerts by pressing the “My Info Alerts” tab and selecting the preferences for the alert topic you desire.
- For detailed instructions on setting up alerts or other functions of the Website see the Online User’s Guide

.

Helpful Tips

This section contains helpful information on:

- Accessing the wireless internet from the Motorola V60t
- Selecting a language
- Finding your way to the Home menu
- Scrolling, choosing items, and using the soft keys on your phone
- Entering text with your key pad
- Exiting the Wireless Internet data call
- Personalizing Information in My Info
- Using Interactive Messaging

Accessing the Wireless Internet

Motorola V60t

Make sure you have familiarized yourself with the Internet-ready phone features by spending a few minutes with the phone manual. Follow battery installation and charging procedures to insure that your phone is ready to go.

To begin accessing the Internet and using your Motorola V60t, complete the following steps:

Step	Action
1	Press the **PWR** button (lower left of the keypad) to turn your V60t, wireless phone on.
2	Press the **Menu** key Note: "Recent Calls" will be highlighted.
3	Press the ⇓ button until "Browser" is highlighted.
4	Press the **Select** soft key. Note: The phone will begin connecting.
5	The phone will now display "Security is not enabled. Enabling security can take several minutes. Proceed?". Press the **YES** soft key.

Selecting a Language

Motorola V60t

The **first** time you connect to the Internet using your wireless phone, the phone browser will prompt you to make a language selection (English or Spanish). You can make a selection by following these steps:

Step	Action
1	After connecting to My Wireless Window, you will be prompted to select a language. Use the ⇑ and ⇓ keys to highlight the appropriate language and press the **OK** soft key to select.
2	You will then be presented with the Cingular Home WAP menu: **Cingular** **My Info** **Messaging/Email** **News & Weather** **Fun & Games** **Business & Finance** **Sports** **Travel** **Find It** **More…** Use the ⇑ and ⇓ key to highlight "My Info" on your screen and press the **OK** soft key to select.
3	You will be prompted to enter your username. You should sign in, using the username you selected during Self-Registration (If you have not registered, Refer to the *Self-Registering* section earlier in this. Enter your username (Refer to *Entering Text With Your Keypad*) and press the **OK** soft key.
4	You will then be prompted to enter your password. Enter the password you created during Self-Registration (Refer to *Entering Text With Your Keypad*). Press the **NEXT** soft key to select. Note: The phone will now connect to the "My Info" section of My Wireless Window and display the Sign-in page.

Finding Your Way Home

Finding Your Way Home

Your **Home menu** will be similar to that shown here:

Cingular
My Info
Messaging/Email
News & Weather
Fun & Games
Business & Finance
Sports
Travel
Find It
More…

Navigating to the Home Menu

Each Internet-ready wireless phone has its own way of navigating to the Home menu. Refer to the materials that came with your Internet-ready wireless phone, and locate the keys or methods used to navigate and display the Home menu.

The table below shows you how to get to the Home menu using Motorola V60t phone. When you are instructed in this guide to navigate to a particular location, use the appropriate keys or key sequence to display the Home menu and begin the navigation task from there.

Phone Model	Action
Motorola V60t	When using the phone browser, depending where you are within the sub-menus (ex. News and Weather), you will be presented with different options for returning to the home menu: If the word "Home" appears in the lower left section of the display, simply press the soft key. If the word "Menu" appears in the lower left section of the display, press the soft key and you will be presented with a list of options. Just use the ⇑ and ⇓ key to highlight "Home" and press the **OK** soft key.

Scrolling, Choosing Items, and Using the Soft Keys On Your Phone

Scrolling

Often, menus are too long to fit on a single phone screen. Similarly, an entire e-mail message or a web page might not fit on a single screen. If there is more information than the phone's display can handle, use the ⇑ and ⇓ key to scroll down the page or press the corresponding soft key to show "**More**".

Choosing Items

While navigating the menus, you will view a series of menu options for different actions. Use the ⇑ and ⇓ key on the phone to highlight the desired item. Then select the associated soft key with the desired command (for example, press the **OK** soft key).

Using Soft Keys

Soft keys initiate the commands that are displayed in the bottom right, center and/or right of the phone screen. On most screens, soft key commands will display. Using the keys positioned directly below the bottom left, middle and right of the phone's screen will initiate those commands.

The arrangement and availability of soft keys varies depending on your phone's make and model. *Refer to the materials that came with your Internet-ready wireless phone for specific information about the location and behavior of the keys on your phone, and how they initiate commands*.

Using the Keys on Your Internet-ready wireless Phone

In addition to soft keys, each phone model has different keys that might perform the same function. Some keys may also serve a dual purpose, meaning they perform one function when using the browser and another when using the phone to make calls.

Make sure you familiarize yourself with the most commonly used keys on your phone, including those used to scroll up and down and the soft keys.

Entering Text with Your Key Pad

Entering Text

You can enter letters, numbers and symbols on the V60t by using the keypad, however there are several convenient methods for doing so:

Please refer to the "Entering Text" section of your phone's manual for in-depth information on using these various methods of imputing text.

"iTAP" lets the phone predict each word as you type it. Then chose a word from a list of possibilities.

"Tap Method" lets you enter characters one at a time by pressing the key for letter, number, or symbol. This is the standard form of text input.

"Numeric" lets you enter only the number that appears on each key.

"Symbol" allows you to enter symbols only

Once you choose an input method, it will remain in that mode until changed. Even if the phone is powered off. If you make a mistake, use the "*" key to erase each character.

Exiting a Wireless Internet Data Call

Exit a Data Call

On the Motorola V60t, to end a data call at any time, simply press the **End** key (refer to your owner's manual). The phone will return to the idle screen and the In Use Indicator (refer to your owner's manual) will disappear.

Personalizing Information in My Info

Sign In

Although you can start using the Wireless Internet service immediately, we recommend that you first personalize your information in My Info from your computer. The *Wireless Internet Online User's Guide* gives detailed instructions on how to personalize the My Wireless Window web portal.

Using your phone browser, you can view and interact with the information in **My Info** by following these steps:

Step	Action
1	Place a Wireless Internet call.
2	Select the **My Info** link.
3	Enter the username and password that you selected when activating the service. **Hint:** First, scroll to **Username**. Using the keypad, enter your username. Then do this to enter your password.
4	Scroll down and select **Next**. The service will sign you in and present links to your personal information from the My Wireless Window web portal. **Note:** If you sign out, you will not be able to access the My Info section. You must sign in again to view this information.

Using Interactive Messaging

Sending a Message

Interactive Messaging allows you to send and receive text messages from your Motorola V60t to other Cingular customers with Interactive Messaging capable phones.

Note: You must subscribe to Interactive Messaging to use this feature.

Step	Action
1	From the idle phone display, press the **Menu** key. The phone will display "Recent Calls".
2	Use the ⇑ **and** ⇓ key to scroll and highlight "Messages" and press the **SELECT** soft key .The phone will display "Voicemail".
3	Use the ⇑ **and** ⇓ key to scroll and highlight "Text Msgs" and press the **SELECT** soft key. The phone will now display "Create Message".
4	Press the **SELECT** soft key. Use the ⇑ **and** ⇓ key to scroll and highlight "To:" and enter the 10 digit mobile phone number that you wish to send the message to. It is not necessary to enter the 1 before the areacode. Now press the **OK** soft key.
5	"Msg:" will now be highlighted. Enter the message you wish to send (For an explanation on how to enter text, refer to your owner's manual or *Entering Text With Your Keypad* in this guide) and press the **OK** soft key.
6	Your phone will automatically default to a Normal priority. If you wish to change it, simply press the **CHANGE** soft key and use the ⇑ **and** ⇓ key to highlight the appropriate priority and press the **SELECT** soft key.
7	Press the **DONE** soft key and the phone will display "Send Messages Now?". Press the **YES** soft key to send your message.

Receiving a Message

You can receive text messages on your Motorola V60t as well!

Note: You must subscribe to Interactive Messaging to use this feature.

Step	Action
1	When another customer with Interactive Messaging sends a text message to your Motorola V60t, the phone will display "1 New Text Message". To read it, press the **READ** soft key.
2	The text message will then be displayed. Use the ⇓ key to scroll through the message.
3	When you have finished reading the message, you can press the **DELETE** or **SAVE** soft keys.